


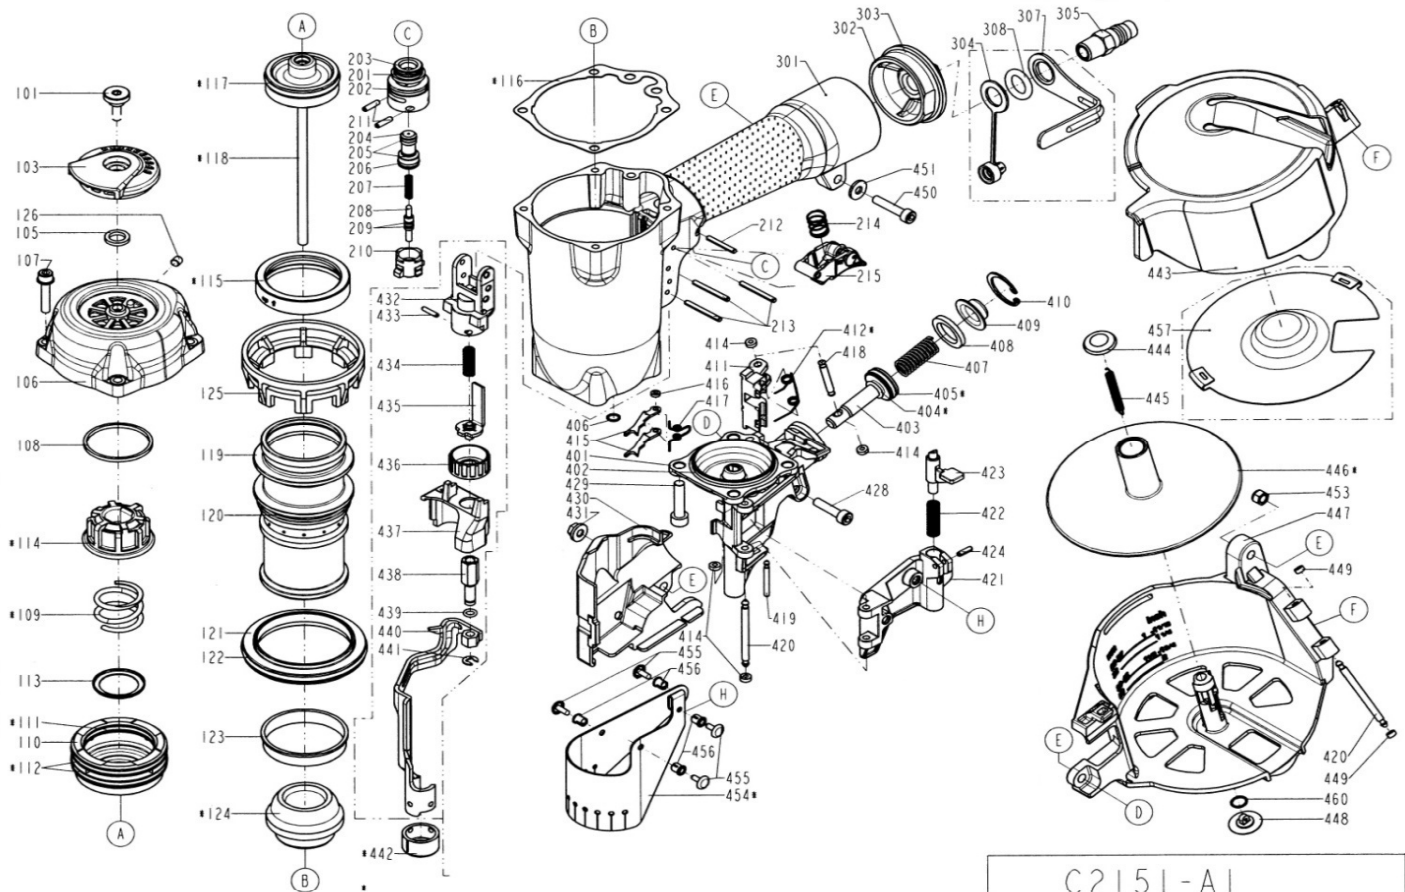

Repère	Code	Français	English	Deutsch	Español	Romana
101	12B00304	vis du déflécteur	Deflector screw	Leitblech schraube	Tornillo del deflector	Surub de deflector
103	12B02371	déflécteur	deflector	Leitblech	Deflector	Deflector
105	12B00294	anneau	Ring	Scheibe	Arandela	Saiba
106	12B02372	Couvercle	Cover	Deckel	tapadera	Capac
107	12B00780	Vis	screw	Schraube	Tornillo	Surub
108	12B01356	rondelle	Ring	Scheibe	Arandela	Saiba
109	12B01932	ressort	Spring	Feder	Muelle	Arc
110	12B01943	Valve de piston	Piston valve	Kolbenventil	Valvula del piston	Valva Pistonului
111*	12B01964	joint	O-ring	O-ring	Junta	Garnitura
112*	12B01408	joint	O-ring	O-ring	Junta	Garnitura
113	12B01357	rondelle	Ring	Scheibe	Arandela	Saiba
114	12B01346	joint	O-ring	O-ring	Junta	Garnitura
115	12B01956	Bague	Collar	Ring	Manguito	Inel
116	12B00345	joint	O-ring	O-ring	Junta	Garnitura
117*	12B00412	joint	O-ring	O-ring	Junta	Garnitura
118	12B02275	Piston	Piston	Kolben	Piston	Piston
119	12B02291	cylindre	cylinder	Zylinder	cilindro	Cilindru
120*	12B00722	joint	O-ring	O-ring	Junta	Garnitura
121	12B01803	bague de cylindre	Cylinderring	Zylinder Ring	Manguito de cilindro	Inel de cilindru
122*	12B01831	joint	O-ring	O-ring	Junta	Garnitura
123	12B00270	joint	O-ring	O-ring	Junta	Garnitura
124	12B00342	amortisseur	Bumper	Puffer	amortiguador	Amortizor
125	12B00336	bague de cylindre	Cylinderring	Zylinder Ring	Manguito de cilindro	Inel de cilindru
125	12B02375	ressort	Spring	Feder	Muelle	Arc
126	12B00205	Vis	screw	Schraube	Tornillo	Surub
201	12B00324	joint	O-ring	O-ring	Junta	Garnitura
202	12B00122	joint	O-ring	O-ring	Junta	Garnitura
203	12B00269	Couvercle	Cover	Deckel	tapadera	Capac
204	12B00167	servo commande	Trigger valve head	Ventil	Cabeza de la valvula	Cap de valva
205	12B00212	joint	O-ring	O-ring	Junta	Garnitura
206	12B00209	joint	O-ring	O-ring	Junta	Garnitura
207	12B00168	ressort	Spring	Feder	Muelle	Arc
208	12B01790	Tige de servo cde	Plunger	Sauger	Ventosa	Ventuza
209	12B00086	joint	O-ring	O-ring	Junta	Garnitura
210	12B00267	servo commande	Trigger valve head	Ventil	Cabeza de la valvula	Cap de valva
211	12B00139	Goupille	Pin	Stift	Clavija	Zavor
212	12B00016	Goupille	Pin	Stift	Clavija	Zavor

213	12B00401	ressort	Spring	Feder	Muelle	Arc
214	12B00384	ressort	Spring	Feder	Muelle	Arc
215	12B00326	gâchette	Trigger	Drücker	Gatillo	Opritor
301	12B01797	corps	Body	Gehäuse	Cuerpo	Corp
302	12B00421	tête	Cap	Deckel	Tapa	Capac
303*	12B00218	joint	O-ring	O-ring	Junta	Garnitura
304	12B00020	protection plastique	Plastic protection	Kunststoffschrürze	Proteccion plastico	Protectile
305	12B00019	raccord	Air plug	Anschluss	Empalme	Racord
306	12B02376	protection	Protection	Sicherheit	Proteccion	Sigurante
307	12B01299	ressort	Spring	Feder	Muelle	Arc
308*	12B00117	joint	O-ring	O-ring	Junta	Garnitura
401	12B02377	nez	Nose	Nase	Morro	Nas
402*	12B00754	joint	O-ring	O-ring	Junta	Garnitura
403	12B00374	Piston	Piston	Kolben	Piston	Piston
404*	12B00418	joint	O-ring	O-ring	Junta	Garnitura
405*	12B01418	joint	O-ring	O-ring	Junta	Garnitura
406*	12B00419	joint	O-ring	O-ring	Junta	Garnitura
407	12B01759	ressort	Spring	Feder	Muelle	Arc
408	12B00359	amortisseur	Bumper	Puffer	amortiguador	Amortizor
409	12B00376	Couvercle	Cover	Deckel	tapadera	Capac
410	12B01420	amortisseur	Bumper	Puffer	amortiguador	Amortizor
411	12B02378	poussoir	trigger	Ausloser	pulsador	secundor
412	12B00330	ressort	Spring	Feder	Muelle	Arc
414	12B00469	joint	O-ring	O-ring	Junta	Garnitura
415	12B00331	poussoir	trigger	Ausloser	pulsador	secundor
416	12B01438	circilps	circlips	Sicherungsring	Tuerca	Piulita
417	12B00332	ressort	Spring	Feder	Muelle	Arc
418	12B00434	Goupille	Pin	Stift	Clavija	Zavor
419	12B00365	Goupille	Pin	Stift	Clavija	Zavor
420	12B00373	pivot	Pivot	Drehachse	Pivote	Pivot
421	12B02380	porte	Door	Gatter	Puerta	Usa
422	12B01387	ressort	Spring	Feder	Muelle	Arc
423	12B01388	levier	Lever	Hebel	Palanca	Impagatot
424	12B01104	Goupille	Pin	Stift	Clavija	Zavor
428	12B01147	Vis	screw	Schraube	Tornillo	Surub
429	12B01223	Vis	screw	Schraube	Tornillo	Surub
430	12B02381	Couvercle	Cover	Deckel	tapadera	Capac
431	12B00403	tête	Cap	Deckel	Tapa	Capac
432	12B00349	guide sécurité	Safety guide	Sicherheitfuehrung	Guia de seguridad	Guidaj de sigurante
433	12B00626	Goupille	Pin	Stift	Clavija	Zavor
434	12B00164	Ressort de sécurité	Safety spring	sicherungsFeder	Muelle de seguridad	Arc de siguranta
435	12B02382	sécurité B	Safety B	Sicherheit B	Seguridad B	Sigurante
436	12B00391	axe d'ajustement	Adjust axie	Achseanpassung	Eje de Ajuste	Axa de ajustaje
437	12B00385	Couvre sécurité B	Safety cover B	Sicherungsdeckel B	Tapa de seguridad B	Capac de sigurante B
438	12B02383	guide	Driver unit	Führer	Guia	Ghidaj
439*	12B00478	joint	O-ring	O-ring	Junta	Garnitura
440	12B02384	sécurité A	Safety A	Sicherungeinheit	Unidad de seguridad	Sigurante
441	12B00624	circilps	circlips	Sicherungsring	Tuerca	Piulita
442	12B02385	protection	Protection	Sicherheit	Proteccion	Sigurante
442	12B02386	protection	Protection	Sicherheit	Proteccion	Sigurante
443	12B02387	magasin	Magazine	Magazin	Almacen	Magazie
444	12B01758	socle	rear plate	sockel	Zocalò	Bazà
445	12B01765	ressort	Spring	Feder	Muelle	Arc
446	12B00362	entretoise	Strut	Abstandshalter	Tirante	Spacer
447	12B01855	magasin	Magazine	Magazin	Almacen	Magazie
448	12B00432	socle	rear plate	sockel	Zocalò	Bazà
449	12B01897	joint	O-ring	O-ring	Junta	Garnitura
450	12B00679	Vis	screw	Schraube	Tornillo	Surub
451	12B00206	rondelle	Ring	Scheibe	Arandela	Saiba
453	12B00078	écrou	Screw nut	Mutter	Tuerca	Piulita
454	12B02388	protection	Protection	Sicherheit	Proteccion	Sigurante
455	12B00341	Goupille	Pin	Stift	Clavija	Zavor
456	12B00337	joint	O-ring	O-ring	Junta	Garnitura
457	12B02389	plaque avant	Drive guide cover	schaltlatt	placa	placa
460*	12B01671	joint	O-ring	O-ring	Junta	Garnitura