

PRODUCT INFO		
Art. Nr		
<i>P3500 spare parts</i>		
52100	3500 SP 1	Piston 2/DN-1 w/ring
52102	3500 SP 2	Piston flat end w/ring-standard
52106	3500 SP 3	Piston ring
52108	3500 SP 4	Guide 2/f-3
52110	3500 SP 5	Baseplate 2/S-13
52112	3500 SP 6	Piston stop
52114	3500 SP 7	Guide 2/F-4 limited access
52116	3500 SP 8	Baseplate 2/S-14-1 limited access
52118	3500 SP 9	Tigger
52120	3500 SP 10	Shear clip
52122	3500 SP 11	Steel annular ball
52124	3500 SP 12	Release lever pin
52126	3500 SP 13	Lever guide kit
52128	3500 SP 14	Threaded pin
52130	3500 SP 15	Advance lever
52132	3500 SP 16	Advance lever guide
52134	3500 SP 17	Sear spring
52136	3500 SP 18	Annular ball spring
52138	3500 SP 19	Firing pin return spring
52140	3500 SP 20	Strip pressure ball and spring
52142	3500 SP 21	Advance lever spring
52144	3500 SP 22	Rear spring kit
52146	3500 SP 23	Sear
52148	3500 SP 24	Firing pin
52150	3500 SP 25	End cap
52152	3500 SP 26	Pressure pin
52154	3500 SP 27	Compression spring
52156	3500 SP 28	Firing pin unit
52158	3500 SP 29	Front allen cap screw (2)
52160	3500 SP 30	Piston guide
52162	3500 SP 31	Steel liner assembly
52164	3500 SP 32	Housing
52166	3500 SP 33	Stabilizer
52168	3500 SP 34	Support strip assembly
52170	3500 SP 35	Release lever
52172	3500 SP 36	Retaining ring
52174	3500 SP 37	Trigger return spring
52176	3500 SP 38	Advance lever bushing
52178	3500 SP 39	Spring guide
52180	3500 SP 40	Spring detent
52182	3500 SP 41	Cheese head screw (2)
52184	3500 SP 42	Handle allen screw
52186	3500 SP 43	Rubber grip
52181	3500 SP 44	Firing pin assembly